


INSTALLATION INSTRUCTIONS

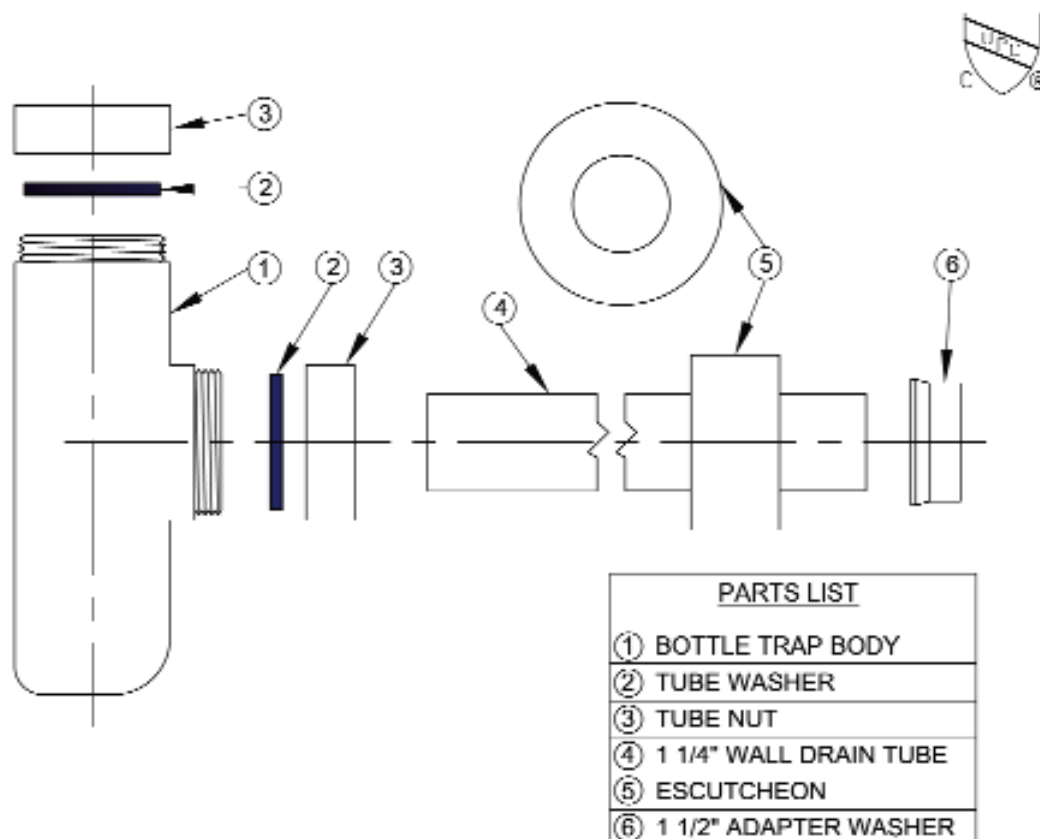

1. REMOVE ALL TUBE NUTS AND WASHERS.
2. MEASURE AND TRIM 1 1/4" WALL DRAIN TUBE .
3. SLIDE TUBE NUT AND WASHER ON TO LAVATORY DRAIN TAILPIECE (NOT SUPPLIED).
4. PUSH BOTTLE TRAP BODY ON TAILPIECE THEN LIGHTLY TIGHTEN THE TUBE NUT.
5. SLIDE ESCUTCHEON, TUBE NUT AND WASHER ON TO 1 1/4" DRAIN TUBE.
6. PUSH TUBE INTO WALL DRAIN CONNECTION. USE 1 1/2" ADAPTER FOR LARGER PIPE.
7. PUSH 1 1/4" WALL DRAIN TUBE INTO SIDE OF BOTTLE TRAP BODY AND TIGHTEN TUBE NUT LIGHTLY
8. LINE UP ALL PARTS AND TIGHTEN TUBE NUTS AND WALL CONNECTION.
9. TEST FOR LEAKS AND SLIDE ESCUTCHEON BACK TO WALL.

FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB[®], SCRUBBING BUBBLES[®] OR COMET[®] TO CLEAN. DO NOT USE BRUSH OR SCRUBBING PADS. THIS WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDOL[®] C ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLOTHES WILL HELP PROTECT THE FINISH.

WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.